










Hook Up

INSTRUCTIONS


Community Table

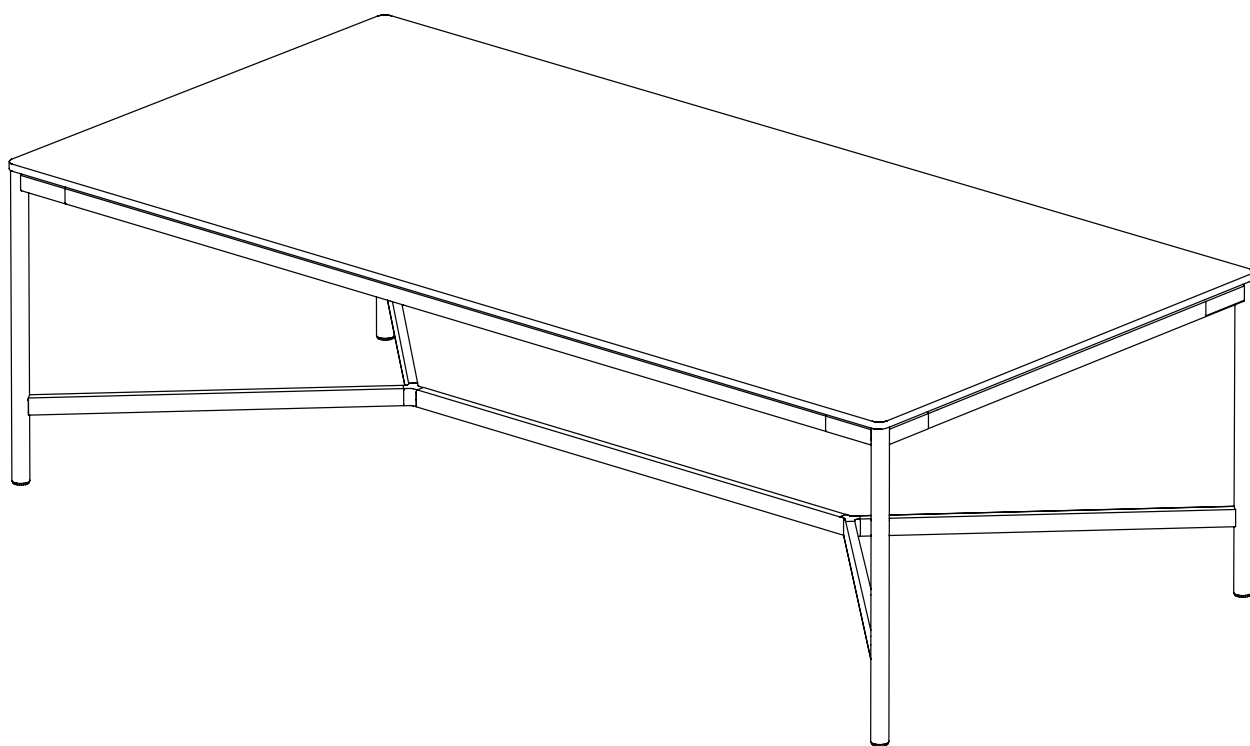

three h

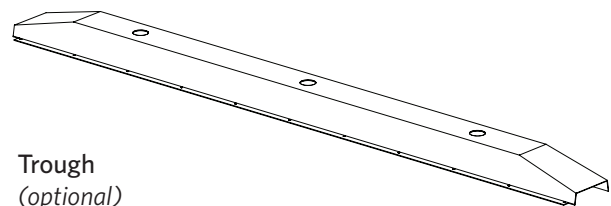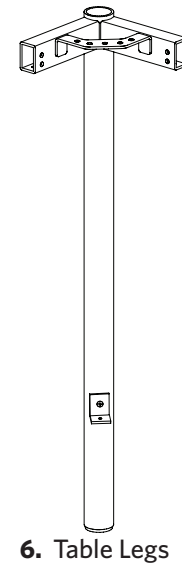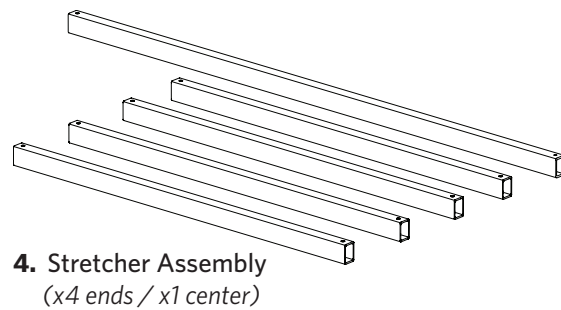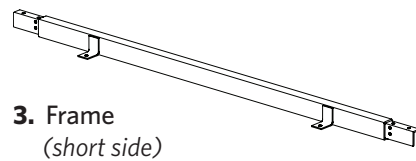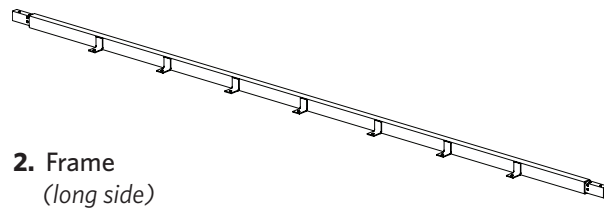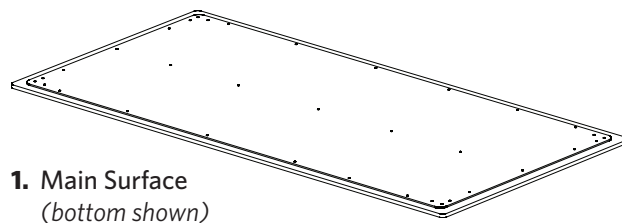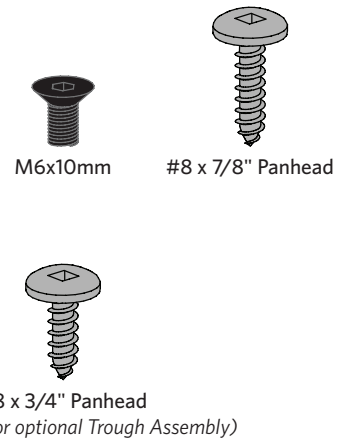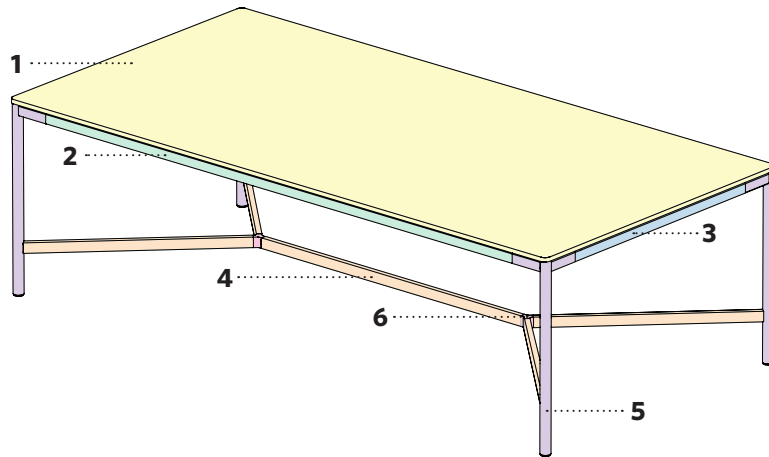

1

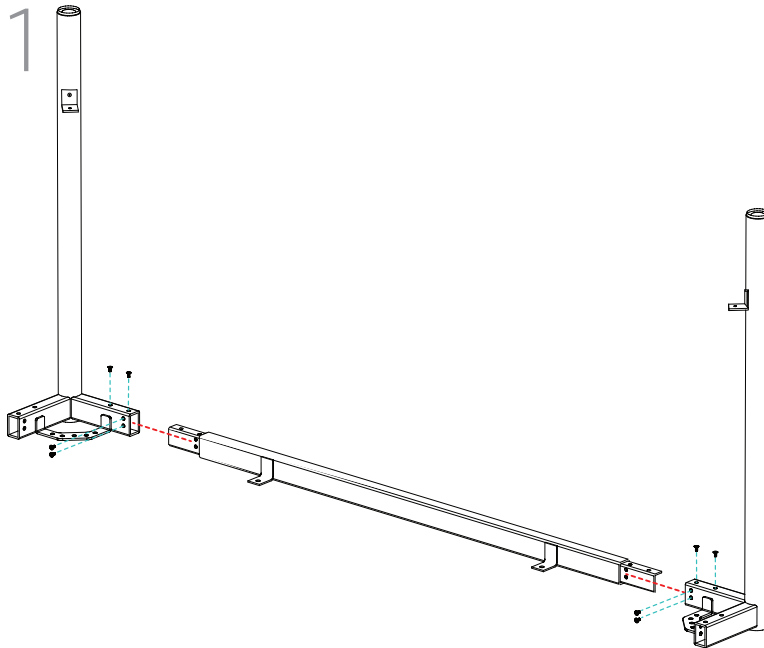


Slide both Table Legs onto the Short Frame.

Fasten the legs to the frame using the provided M6x10mm flathead screws. Do not fully tighten, only enough to keep together.

Repeat for opposite side.




M6x10mm
Qty: 16

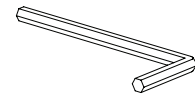

Allen Key

2

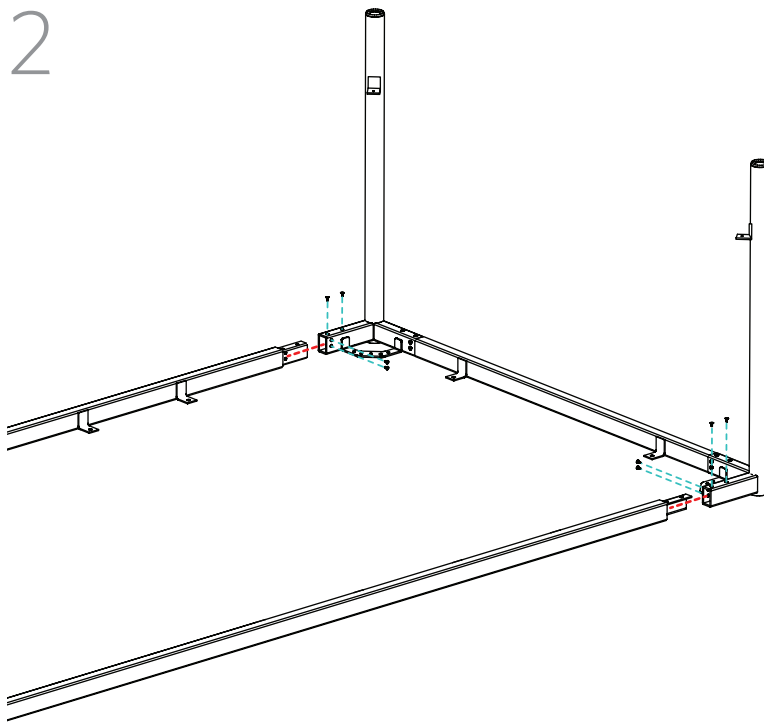


Slide the Long Frames into the Leg brackets on one side only.

Fasten the frame to the legs using the provided M6x10mm flathead screws. Do not fully tighten, only enough to keep together.


Leave the second piece from Step 1 unattached.



M6x10mm
Qty: 16



Allen Key

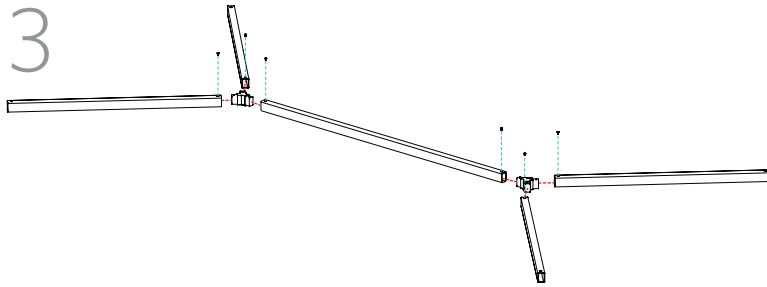


Lay the pieces out for the Stretcher. Slide the arms onto the 3-way connectors and fasten with the provided M6x10mm flathead screws.


Tighten the screws equal amounts around the Stretcher until fully tight.



M6x10mm
Qty: 6



Allen Key

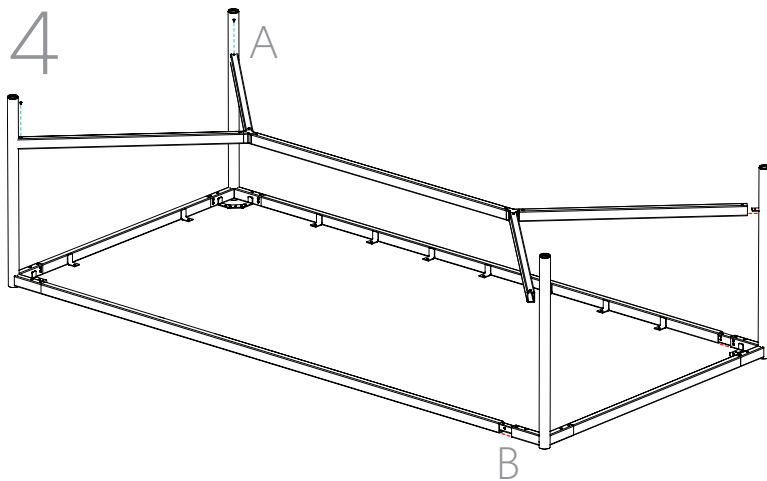


A) With 2 people, install the Stretcher in place on one end using the pre-installed Leg Brackets.

Fasten with the provided M6x10mm flathead screws.

B) Slide the opposite leg/frame onto the long frame so the stretcher can rest in place on the leg brackets.




M6x10mm
Qty: 2



Allen Key

5

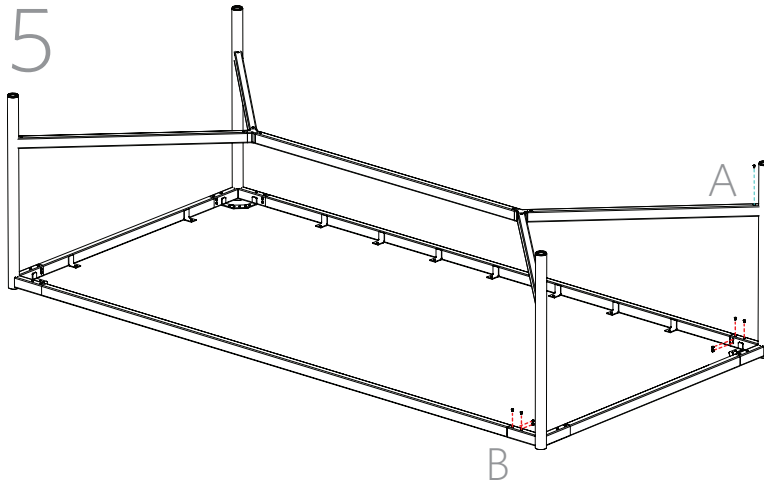


A) Start by fastening the Stretcher to the Legs using 2 M6x10mm screws.

B) Finish by fastening the Leg set up to the Long Frames using 8 of the provided m6x10mm screws.




M6x10mm
Qty: 10



Allen Key


6

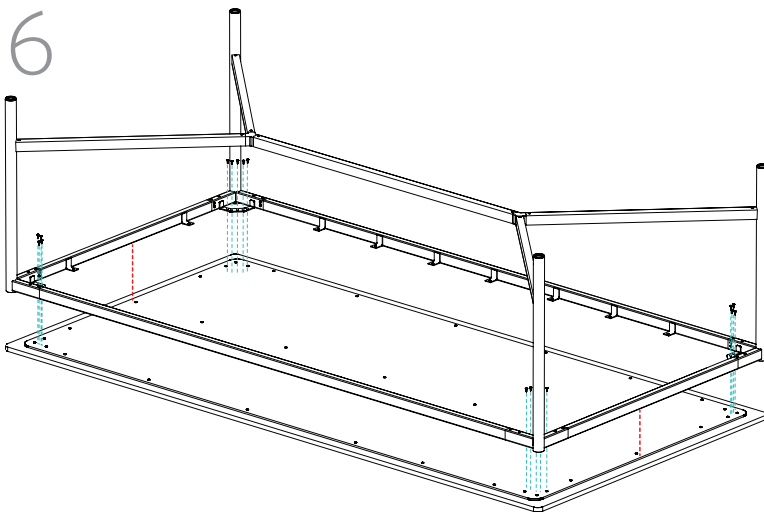


Place the Leg & Frame structure on the worksurface. Use caution to not scratch the surface.

Center the frame on the worksurface and fasten the surface to the Leg Brackets using the provided #8 x 7/8" Panhead screws.

It is recommended to insert one screw on each corner leg to start. Verify all leg tubes are equal distance from surface edges - then apply and tighten all remaining screws.




#8 x 7/8" Panhead
Qty: 20

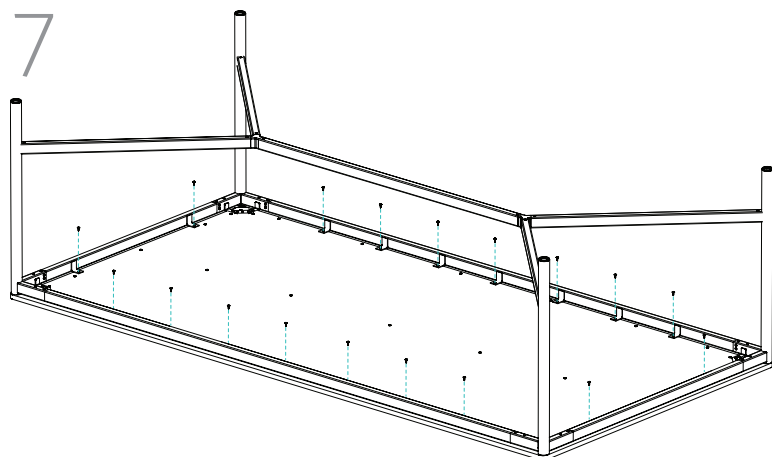


Continue to fasten the worksurface to the frame using the small L brackets and provided 7/8" Panhead screws. The quantity of screws will depend on the length and depth.

Use a power drill as there are no pre-drilled holes for this step.

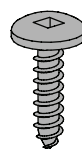

#8 x 7/8" Panhead

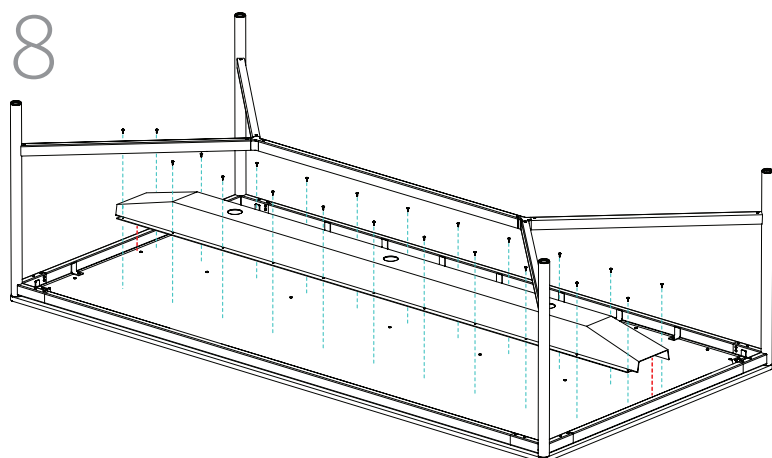

The Community Table Trough is an optional addition, your table may not include one.

Center the trough in the middle of the table. Insert 4 screws in the 4 corners to mark the position and then remove the Trough. Assuming your table has Power, you will want to install the modules before fastening the trough in place. Once installed, you can fully fasten the Trough with the provided #8 x 3/4" Panhead screws.

Ensure you have the correct screws, anything longer than 3/4" will damage the top.



#8 x 3/4" Panhead

Three H Furniture Systems Limited

156462 Clover Valley Rd.

New Liskeard, ON

Canada POJ 1P0

T. 1.800.767.5374

F. 1.888.484.5786

customer.service@three-h.com

www.three-h.com

Revision 5 · 06/14/2022

© 2022 Three H Furniture Systems Limited. All rights reserved.